

1

@SETUPE1
Enter Setup

USB HID Keyboard

When the scanner is connected to the USB port on a host device, you can enable the USB HID Keyboard feature by scanning the barcode below. Then scanner's transmission will be simulated as USB keyboard input. The Host receives keystrokes on the virtual keyboard. It works on a Plug and Play basis and no driver is required.

2

@INTERF3
** USB HID Keyboard

เชื่อมต่อกับพอร์ต USB บนอุปกรณ์



If the host device allows keyboard input, then no extra software is needed for HID Keyboard input.

3

@SETUPE0
** Exit Setup