



Enable Alt-Mode – See *Enable ALT-Mode (Normal)* for description.



Send Numbers as Keypad Data – All data is sent as if it has been entered on a keypad.
